



TB01 Containers

Specifications:

A TB01 container should:

- Hold 30 gallons,
 - Be 4.0 Cu Ft in size,
 - Be hinged with a lockable lid,
 - Constructed of polyethylene,
 - Have seamless, leak-proof base, and
- Not exceed a limit of 64 pounds gross weight (weight including the container and waste).

Supplies:

Users must supply ASTM-D red bags or liners for the container.

Flip-top lids and dollies are available through Stericycle.


Autoclave or Incinerate?

Waste in this type of container is destined for Stericycle's autoclave **unless** it is labeled "Incineration Only."

Packing:

To properly pack a TB01 container:

- Place the medical waste in ASTM-D bags or liner.
- Secure using a DOT approved knot.
- Place it in a transport container.
- Close the lockable lid.
- Tape or attach the completed manifest with copy on container.
- Place in the pickup location.

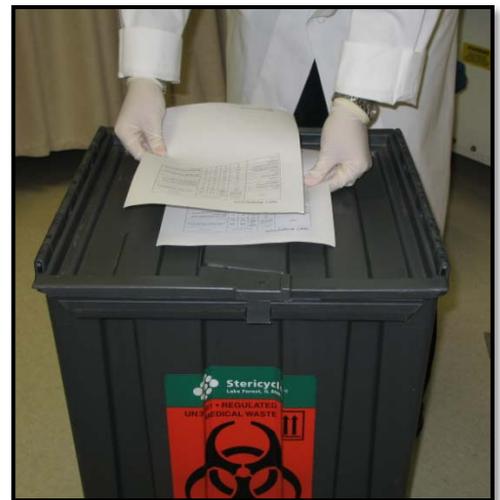



TB02 Containers

Specifications:

A TB02 container should:

- Hold 130 gallons,
 - Be 17.4 Cu Ft in size,
 - Constructed of polyethylene,
 - Have a hinged, lockable lid,
 - Have a seamless, leak-proof base, and
- Not exceed a limit of 250 pounds gross weight (weight including container and waste.)

Other Specifications:

A TB02 container is used for large animal waste destined for Stericycle's incinerator.

Supplies:

Users must supply ASTM-D red bags or liners for the container.

Autoclave or Incinerate?

Waste in this type of container is destined for Stericycle's autoclave unless it is labeled "Incineration Only."

Packing:

To properly pack a TB01 container:

- Place the medical waste in ASTM-D bags or liner.
- Secure using the DOT approved knot.
- Place in the transport container.
- Close lockable lid when the container is at capacity.
- Label "Incinerate Only."
- Tape or attach the completed manifest with copy on container.
- Place in the pickup location.



US43 Containers

Specifications:

A US43 container should:

- Hold 31 gallons,
- Be 18" x 18" x 22" in size,
- Be 4.3 Cu Ft in size,
- Be constructed of sturdy fiberboard, and
- Have a 64 pound limit.

Supplies:

Users must supply ASTM-D red bags or liners for the container.

Autoclave or Incinerate?


Waste in this type of container is destined for Stericycle's autoclave **unless** it is labeled "Incineration Only."

Packing:

To properly pack a US43 container:

- Tape all the bottom seams of the US43 container securely using packing tape.
- Place the medical waste in ASTM-D bags or liner.
- Tie the bag or liner in a DOT approved knot.
- Place the bag or liner in the approved transport container.
- When the box is at capacity, tape the lid.
- Tape or attach the completed manifest and a copy to container.
- Place the container in the pickup location.



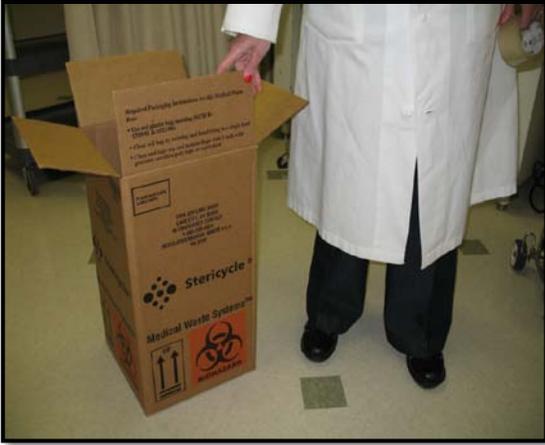

BX05 Containers

Specifications:

A BX05 container should:

- Hold 15 gallons,
- Be 12" x 12" x 22" in size,
- Be 2.0 Cu Ft in size, and
- Be constructed of sturdy fiberboard.

Supplies:

Users must supply ASTM-D red bags or liners for the container.

Autoclave or Incinerate?

Waste in this type of container is destined for Stericycle's autoclave **unless** it is labeled "Incineration Only."

Packing:

To properly pack a BX05 container:

- Securely tape the bottom seams of BX05 container.
- Place the medical waste in ASTM-D bags or liners.
- Tie the bag or liner in a DOT approved knot or tape down.
- Place the medical waste in an approved transport container.
- Tape the lid when the transport container is at capacity.
- Attach completed manifest and a copy to container.
- Place the container in a pickup location.

